

Voice Commands (FF7x7)

A D F ONE FREQUENCY adf_frequency	A D F ONE HEADING degrees
A D F TWO FREQUENCY adf_frequency	A D F TWO HEADING degrees
A P U BLEED OFF	A P U BLEED ON
A P U GENERATOR OFF	A P U GENERATOR ON
A P U OFF	A P U ON
A P U START	ALTERNATOR OFF
ALTERNATOR ON	ALTIMETER STANDARD
ALTIMETER altimeter_setting	ARRESTING HOOK DOWN
ARRESTING HOOK UP	AUTO BRAKES MAX
AUTO BRAKES OFF	AUTO BRAKES REJECTED TAKEOFF
AUTO BRAKES number	AUTO FEATHER OFF
AUTO FEATHER ON	AUTO FEATHER TEST
AUTO IGNITION OFF	AUTO IGNITION ON
AUTO THROTTLE ARM	AUTO THROTTLE DISCONNECT
AUTO THROTTLE OFF	AUTO THROTTLE ON
AUTO THROTTLE TOGA	AUTOPILOT ALTITUDE
AUTOPILOT ALTITUDE CAPTURE	AUTOPILOT ALTITUDE FLIGHT LEVEL number
AUTOPILOT ALTITUDE number	AUTOPILOT APPROACH
AUTOPILOT AUTO THROTTLE	AUTOPILOT BACK COURSE
AUTOPILOT CENTER	AUTOPILOT DISENGAGE
AUTOPILOT FLIGHT LEVEL CHANGE	AUTOPILOT GLIDE SLOPE
AUTOPILOT HEADING	AUTOPILOT HEADING HOLD
AUTOPILOT HEADING degrees	AUTOPILOT LATERAL NAVIGATION
AUTOPILOT LEFT	AUTOPILOT LOCALIZER
AUTOPILOT N ONE	AUTOPILOT NAV
AUTOPILOT OFF	AUTOPILOT ON
AUTOPILOT RIGHT	AUTOPILOT SPEED
AUTOPILOT SPEED number	AUTOPILOT THRUST
AUTOPILOT VERTICAL NAVIGATION	AUTOPILOT VERTICAL SPEED
AUTOPILOT VERTICAL SPEED number	AVIONICS MASTER OFF
AVIONICS MASTER ON	BATTERY OFF
BATTERY ON	BATTERY number OFF

BATTERY number ON	BEACON OFF
BEACON ON	BRAKE OFF
BRAKE ON	CABIN ALTITUDE number
CARB HEAT OFF	CARB HEAT ON
COCKPIT BRIGHTNESS number	COM ONE FREQUENCY com_frequency
COM TWO FREQUENCY com_frequency	COWL FLAPS CLOSED
COWL FLAPS OPEN	D M E FREQUENCY number
D M E MODE FREQUENCY	D M E MODE GROUND SPEED
D M E MODE REMOTE	D M E SELECT ONE
D M E SELECT TWO	DECISION HEIGHT number
ECAM MODE ENGINE	ECAM MODE FAILURES
ECAM MODE FLIGHT CONTROLS	ECAM MODE FUEL
ECAM MODE HYDRAULICS	ENGINE ONE SHUTDOWN
ENGINE ONE START	ENGINE TWO SHUTDOWN
ENGINE TWO START	EXTERNAL POWER OFF
EXTERNAL POWER ON	F A D E C OFF
F A D E C ON	F A D E C number OFF
F A D E C number ON	F M S AIRPORT identifier
F M S CLEAR	F M S CLIMB
F M S CRUISE	F M S DELETE
F M S DEPART ARRIVE	F M S DESCEND
F M S DIRECT	F M S EXEC
F M S FIX	F M S FIX identifier
F M S FLY AT FLIGHT LEVEL number	F M S FLY AT number
F M S HOLD	F M S INDEX
F M S INITIALIZE	F M S LEFT number
F M S LEGS	F M S MENU
F M S N D B identifier	F M S NEXT
F M S PREVIOUS	F M S PROGRESS
F M S RADIO	F M S RIGHT number
F M S ROUTE	F M S V O R identifier
FLAPS DOWN	FLAPS DOWN FULL
FLAPS UP	FLAPS UP FULL
FLAPS number	FLIGHT DIRECTOR AUTO

FLIGHT DIRECTOR OFF	FLIGHT DIRECTOR ON
FUEL PUMP OFF	FUEL PUMP ON
FUEL PUMP number OFF	FUEL PUMP number ON
FUEL SELECTOR ALL	FUEL SELECTOR BOTH
FUEL SELECTOR CENTER	FUEL SELECTOR LEFT
FUEL SELECTOR OFF	FUEL SELECTOR RIGHT
G P S AIRPORT identifier	G P S FIX identifier
G P S N D B identifier	G P S V O R identifier
GEAR DOWN	GEAR UP
GENERATOR LEFT OFF	GENERATOR LEFT ON
GENERATOR OFF	GENERATOR ON
GENERATOR RIGHT OFF	GENERATOR RIGHT ON
GENERATOR number OFF	GENERATOR number ON
HEADING SOURCE G P S	HEADING SOURCE NAV ONE
HEADING SOURCE NAV TWO	HUD BRIGHTNESS number
I L S COURSE degrees	I L S FREQUENCY nav_frequency
ICING A O A OFF	ICING A O A ON
ICING ENGINE OFF	ICING ENGINE ON
ICING INLET OFF	ICING INLET ON
ICING OFF	ICING ON
ICING PITOT OFF	ICING PITOT ON
ICING PITOT number OFF	ICING PITOT number ON
ICING PROP OFF	ICING PROP ON
ICING WINDOW OFF	ICING WINDOW ON
ICING WING OFF	ICING WING ON
IGNITER OFF	IGNITER ON
IGNITER number OFF	IGNITER number ON
IGNITION BOTH	IGNITION LEFT
IGNITION OFF	IGNITION RIGHT
IGNITION RUN	IGNITION START
IGNITION number OFF	IGNITION number RUN
IGNITION number START	INSTRUMENT BRIGHTNESS number
INVERTER OFF	INVERTER ON

INVERTER number OFF	INVERTER number ON
LANDING LIGHTS OFF	LANDING LIGHTS ON
LOGO LIGHTS OFF	LOGO LIGHTS ON
MAP MODE APPROACH	MAP MODE CENTER
MAP MODE MAP	MAP MODE PLAN
MAP MODE V O R	MAP OVERLAY AIRPORT
MAP OVERLAY DATA	MAP OVERLAY NAV
MAP OVERLAY TERRAIN	MAP OVERLAY TRAFFIC
MAP OVERLAY WAYPOINT	MAP OVERLAY WEATHER
MAP RANGE number	NAV ONE BEARING degrees
NAV ONE COURSE degrees	NAV ONE FREQUENCY nav_frequency
NAV TWO BEARING degrees	NAV TWO COURSE degrees
NAV TWO FREQUENCY nav_frequency	NAVIGATION LIGHTS OFF
NAVIGATION LIGHTS ON	PACKS AUTO
PACKS OFF	PACKS ON
PARACHUTE DEPLOY	POSITION LIGHTS OFF
POSITION LIGHTS ON	PRESSURE LANDING ALTITUDE number
PROP SYNC OFF	PROP SYNC ON
RUNWAY LIGHTS OFF	RUNWAY LIGHTS ON
SEAT BELTS AUTO	SEAT BELTS OFF
SEAT BELTS ON	SPEED BRAKE ARM
SPEED BRAKE DOWN	SPEED BRAKE UP
SPOILERS ARM	SPOILERS DOWN
SPOILERS UP	STROBE LIGHTS OFF
STROBE LIGHTS ON	TAXI LIGHTS OFF
TAXI LIGHTS ON	TRANSPONDER ALTITUDE
TRANSPONDER IDENT	TRANSPONDER OFF
TRANSPONDER ON	TRANSPONDER STANDBY
TRANSPONDER T A	TRANSPONDER T A R A
TRANSPONDER number	TYPE identifier
WING LIGHTS OFF	WING LIGHTS ON
WIPERS FAST	WIPERS OFF
WIPERS ON	WIPERS SLOW
YAW DAMPER OFF	YAW DAMPER ON

