

Voice Commands (EADT x737)

| | |
|--|---------------------------------|
| A D F ONE FREQUENCY adf_frequency | A D F ONE HEADING degrees |
| A D F TWO FREQUENCY adf_frequency | A D F TWO HEADING degrees |
| A P U BLEED OFF | A P U BLEED ON |
| A P U GENERATOR OFF | A P U GENERATOR ON |
| A P U OFF | A P U ON |
| A P U START | ALTERNATOR OFF |
| ALTERNATOR ON | ALTIMETER STANDARD |
| ALTIMETER altimeter_setting | ARRESTING HOOK DOWN |
| ARRESTING HOOK UP | AUTO BRAKES MAX |
| AUTO BRAKES OFF | AUTO BRAKES REJECTED TAKEOFF |
| AUTO BRAKES number | AUTO FEATHER OFF |
| AUTO FEATHER ON | AUTO FEATHER TEST |
| AUTO IGNITION OFF | AUTO IGNITION ON |
| AUTO THROTTLE ARM | AUTO THROTTLE DISCONNECT |
| AUTO THROTTLE OFF | AUTO THROTTLE ON |
| AUTO THROTTLE TOGA | AUTOPILOT ALPHA |
| AUTOPILOT ALTITUDE | AUTOPILOT ALTITUDE CAPTURE |
| AUTOPILOT ALTITUDE FLIGHT LEVEL number | AUTOPILOT ALTITUDE INTERVENTION |
| AUTOPILOT ALTITUDE number | AUTOPILOT APPROACH |
| AUTOPILOT AUTO THROTTLE | AUTOPILOT BACK COURSE |
| AUTOPILOT BRAVO | AUTOPILOT COURSE degrees |
| AUTOPILOT DISENGAGE | AUTOPILOT FLIGHT LEVEL CHANGE |
| AUTOPILOT GLIDE SLOPE | AUTOPILOT HEADING |
| AUTOPILOT HEADING degrees | AUTOPILOT LATERAL NAVIGATION |
| AUTOPILOT LEVEL CHANGE | AUTOPILOT LOCALIZER |
| AUTOPILOT N ONE | AUTOPILOT NAV |
| AUTOPILOT OFF | AUTOPILOT ON |
| AUTOPILOT SPEED | AUTOPILOT SPEED INTERVENTION |
| AUTOPILOT SPEED MACH number | AUTOPILOT SPEED number |
| AUTOPILOT THRUST | AUTOPILOT V O R LOCALIZER |
| AUTOPILOT VERTICAL NAVIGATION | AUTOPILOT VERTICAL SPEED |
| AUTOPILOT VERTICAL SPEED number | AVIONICS MASTER OFF |

| | |
|---------------------------------|----------------------------------|
| AVIONICS MASTER ON | BATTERY OFF |
| BATTERY ON | BATTERY number OFF |
| BATTERY number ON | BEACON OFF |
| BEACON ON | BRAKE OFF |
| BRAKE ON | C D U BRIGHTNESS number |
| CABIN ALTITUDE number | CAPTAINS MAP LIGHT OFF |
| CAPTAINS MAP LIGHT ON | CARB HEAT OFF |
| CARB HEAT ON | COCKPIT BRIGHTNESS number |
| COM ONE FREQUENCY com_frequency | COM TWO FREQUENCY com_frequency |
| COWL FLAPS CLOSED | COWL FLAPS OPEN |
| D M E FREQUENCY number | D M E MODE FREQUENCY |
| D M E MODE GROUND SPEED | D M E MODE REMOTE |
| D M E SELECT ONE | D M E SELECT TWO |
| DECISION HEIGHT number | ECAM MODE ENGINE |
| ECAM MODE FAILURES | ECAM MODE FLIGHT CONTROLS |
| ECAM MODE FUEL | ECAM MODE HYDRAULICS |
| ENGINE ONE CONTINUOUS | ENGINE ONE FLIGHT |
| ENGINE ONE GROUND | ENGINE ONE OFF |
| ENGINE ONE SHUTDOWN | ENGINE ONE START |
| ENGINE TWO CONTINUOUS | ENGINE TWO FLIGHT |
| ENGINE TWO GROUND | ENGINE TWO OFF |
| ENGINE TWO SHUTDOWN | ENGINE TWO START |
| EXTERNAL POWER OFF | EXTERNAL POWER ON |
| F A D E C OFF | F A D E C ON |
| F A D E C number OFF | F A D E C number ON |
| F M S AIRPORT identifier | F M S CLEAR |
| F M S CLIMB | F M S CRUISE |
| F M S DELETE | F M S DEPART ARRIVE |
| F M S DESCEND | F M S DIRECT |
| F M S EXEC | F M S FIX |
| F M S FIX identifier | F M S FLY AT FLIGHT LEVEL number |
| F M S FLY AT number | F M S HOLD |
| F M S INDEX | F M S INITIALIZE |
| F M S LEFT number | F M S LEGS |

F M S N D B identifier

F M S PREVIOUS

F M S RADIO

F M S ROUTE

FIRST OFFICERS MAP LIGHT OFF

FLAPS DOWN

FLAPS UP

FLAPS number

FLIGHT DIRECTOR ALPHA ON

FLIGHT DIRECTOR BRAVO OFF

FLIGHT DIRECTOR OFF

FUEL PUMP OFF

FUEL PUMP number OFF

FUEL SELECTOR ALL

FUEL SELECTOR CENTER

FUEL SELECTOR OFF

G P S AIRPORT identifier

G P S N D B identifier

GEAR DOWN

GENERATOR LEFT OFF

GENERATOR OFF

GENERATOR RIGHT OFF

GENERATOR number OFF

HEADING SOURCE G P S

HEADING SOURCE NAV TWO

ICING A O A OFF

ICING ENGINE OFF

ICING INLET OFF

ICING OFF

ICING PITOT OFF

ICING PITOT number OFF

ICING PROP OFF

ICING WINDOW OFF

F M S NEXT

F M S PROGRESS

F M S RIGHT number

F M S V O R identifier

FIRST OFFICERS MAP LIGHT ON

FLAPS DOWN FULL

FLAPS UP FULL

FLIGHT DIRECTOR ALPHA OFF

FLIGHT DIRECTOR AUTO

FLIGHT DIRECTOR BRAVO ON

FLIGHT DIRECTOR ON

FUEL PUMP ON

FUEL PUMP number ON

FUEL SELECTOR BOTH

FUEL SELECTOR LEFT

FUEL SELECTOR RIGHT

G P S FIX identifier

G P S V O R identifier

GEAR UP

GENERATOR LEFT ON

GENERATOR ON

GENERATOR RIGHT ON

GENERATOR number ON

HEADING SOURCE NAV ONE

HUD BRIGHTNESS number

ICING A O A ON

ICING ENGINE ON

ICING INLET ON

ICING ON

ICING PITOT ON

ICING PITOT number ON

ICING PROP ON

ICING WINDOW ON

| | |
|----------------------------------|---------------------------------|
| ICING WING OFF | ICING WING ON |
| IGNITER OFF | IGNITER ON |
| IGNITER number OFF | IGNITER number ON |
| IGNITION BOTH | IGNITION LEFT |
| IGNITION OFF | IGNITION RIGHT |
| IGNITION RUN | IGNITION START |
| IGNITION number OFF | IGNITION number RUN |
| IGNITION number START | INSTRUMENT BRIGHTNESS number |
| INVERTER OFF | INVERTER ON |
| INVERTER number OFF | INVERTER number ON |
| LANDING LIGHTS OFF | LANDING LIGHTS ON |
| LOGO LIGHTS AUTO | LOGO LIGHTS OFF |
| LOGO LIGHTS ON | MAP MODE APPROACH |
| MAP MODE CENTER | MAP MODE MAP |
| MAP MODE PLAN | MAP MODE V O R |
| MAP OVERLAY AIRPORT | MAP OVERLAY DATA |
| MAP OVERLAY POSITION | MAP OVERLAY STATION |
| MAP OVERLAY TERRAIN | MAP OVERLAY TRAFFIC |
| MAP OVERLAY WAYPOINT | MAP OVERLAY WEATHER |
| MAP RANGE number | NAV ONE BEARING degrees |
| NAV ONE COURSE degrees | NAV ONE FREQUENCY nav_frequency |
| NAV TWO BEARING degrees | NAV TWO COURSE degrees |
| NAV TWO FREQUENCY nav_frequency | NAVIGATION LIGHTS OFF |
| NAVIGATION LIGHTS ON | PACKS AUTO |
| PACKS OFF | PACKS ON |
| PARACHUTE DEPLOY | POSITION LIGHTS OFF |
| POSITION LIGHTS ON | PRESSURE FLIGHT ALTITUDE number |
| PRESSURE LANDING ALTITUDE number | PROP SYNC OFF |
| PROP SYNC ON | RUNWAY LIGHTS OFF |
| RUNWAY LIGHTS ON | SEAT BELTS AUTO |
| SEAT BELTS OFF | SEAT BELTS ON |
| SPEED BRAKE ARM | SPEED BRAKE DOWN |
| SPEED BRAKE UP | SPOILERS ARM |
| SPOILERS DOWN | SPOILERS UP |

STROBE LIGHTS OFF
TAXI LIGHTS OFF
TRANSPONDER ALTITUDE
TRANSPONDER OFF
TRANSPONDER STANDBY
TRANSPONDER T A R A
TYPE identifier
WHEEL WELL LIGHTS ON
WHITE DOME LIGHT ON
WING LIGHTS ON
WIPERS OFF
WIPERS SLOW
YAW DAMPER ON

STROBE LIGHTS ON
TAXI LIGHTS ON
TRANSPONDER IDENT
TRANSPONDER ON
TRANSPONDER T A
TRANSPONDER number
WHEEL WELL LIGHTS OFF
WHITE DOME LIGHT OFF
WING LIGHTS OFF
WIPERS FAST
WIPERS ON
YAW DAMPER OFF